

Axtel FLOW Stereo USB User Manual

# Volume Control for USB



## Inline controller operation and functions:

### Blue Light

Incoming call: Blue light flashes. During a call: Blue light continuous. Connection completed: Blue light off.

#### Answer/end call button

Press the hutton to answer/end a call

#### Volume control

- + Volume up
- Volume down

#### Microphone mute button

Press the button to mute the microphone. Press the button again to unmute the microphone.



# **USB Connection Instructions**

#### Mac system:



1. Switch to System Preferences and Click 'Sound'



2. Click 'Input' or 'Output' to choose 'USB Axtel Flow and click 'ok'.

# **USB Connection Instructions**

#### Windows system:

1. Switch to 'Control Panel' and click 'Hardware and Sound'



2. Click 'Sound', then choose 'USB Audio Device' in 'Playback' and 'Recording'.



### Compatibility

Available for Computer system: Windows 7 /Windows 8/Windows XP/Windows Vista/Windows 10/Mac OS X or other system

Compliant with USB 2.0/3.0 Full-Speed operation and USB Audio Device class specification v 1.0

# Possible problems and solutions

### \*Headset not working

Please check the connection of the USB cable to the computer. Try another USB port on your computer.

#### \*No Sound from headset

Please make sure the headset is unmute, if so, press the mute button to resume normal working state

### \*Playing music doesn't work

Please read USB connection instruction given above, then check if set as default audio device.

### **Specification**

#### Microphone Specification

Transducer: Electret condenser microphone

Impedance: 400Ω@1KHz
Directivity: Omni - Directional
Frequency: 100Hz - 10000Hz

#### Speaker Specification

Transducer: Moving coil dynamic speaker

Impedance:  $32\Omega \pm 15\%$ Sensitivity:  $119 \pm 5 dB@1 KHz$ Frequency respond:  $20 \sim 20 KHz$ Rated input power: 5mW

### Included in the set

- Axtel Flow
- Protective pouch
- User Manual

## Warranty Information

Full two-year Axtel warranty.

